


Pushair

by Ray Malmström.
Other half of plan on page 161, the continuation of this page at rear of magazine.

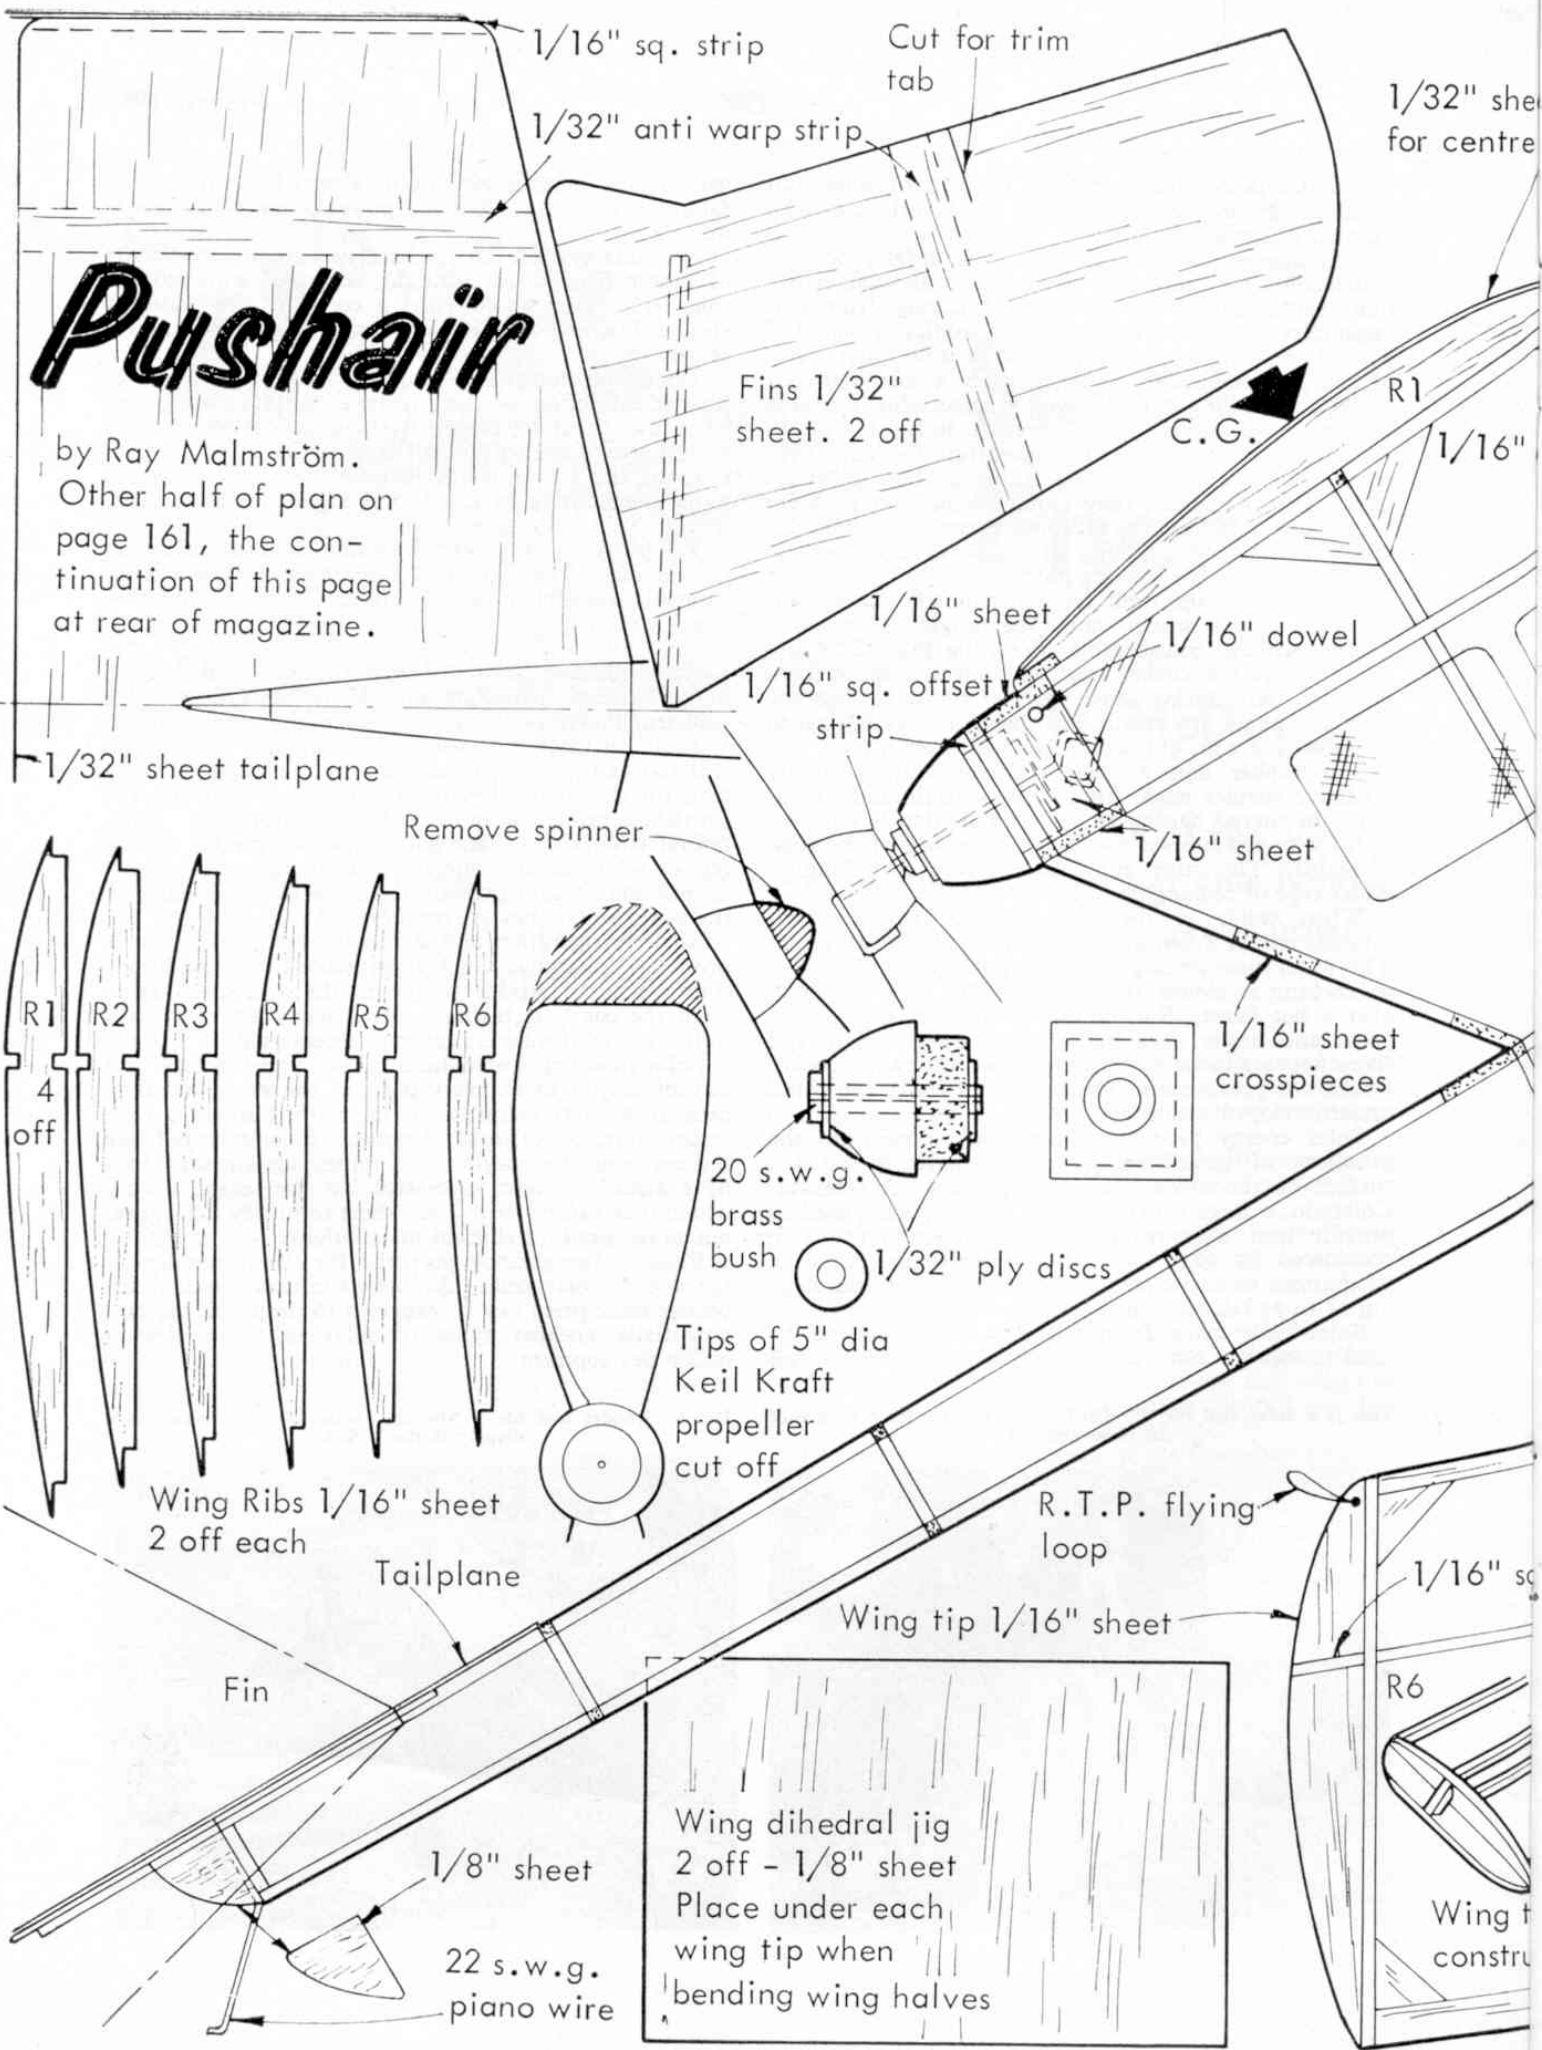

1/16" sq. strip

Cut for trim tab

1/32" anti warp strip

1/32" sheet for centre

Fins 1/32" sheet. 2 off

C.G.

R1

1/16"

1/16" sheet

1/16" dowel


1/16" sq. offset strip

1/16" sheet


1/32" sheet tailplane

Remove spinner

1/16" sheet crosspieces

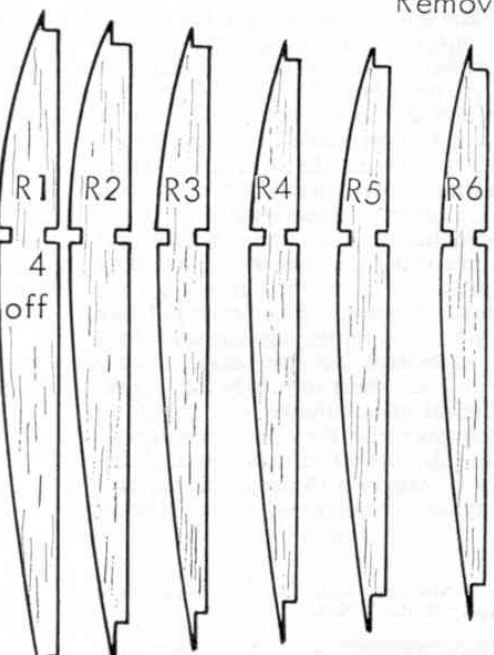


Wing Ribs 1/16" sheet 2 off each

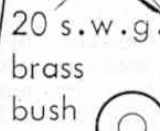

20 s.w.g. brass bush
1/32" ply discs

Tips of 5" dia Keil Kraft propeller cut off

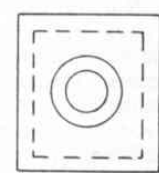

R.T.P. flying loop

Tailplane

Wing tip 1/16" sheet

Fin

1/16" sq


R6

Wing t
constru

1/8" sheet

22 s.w.g. piano wire

Wing dihedral jig
2 off - 1/8" sheet
Place under each wing tip when bending wing halves

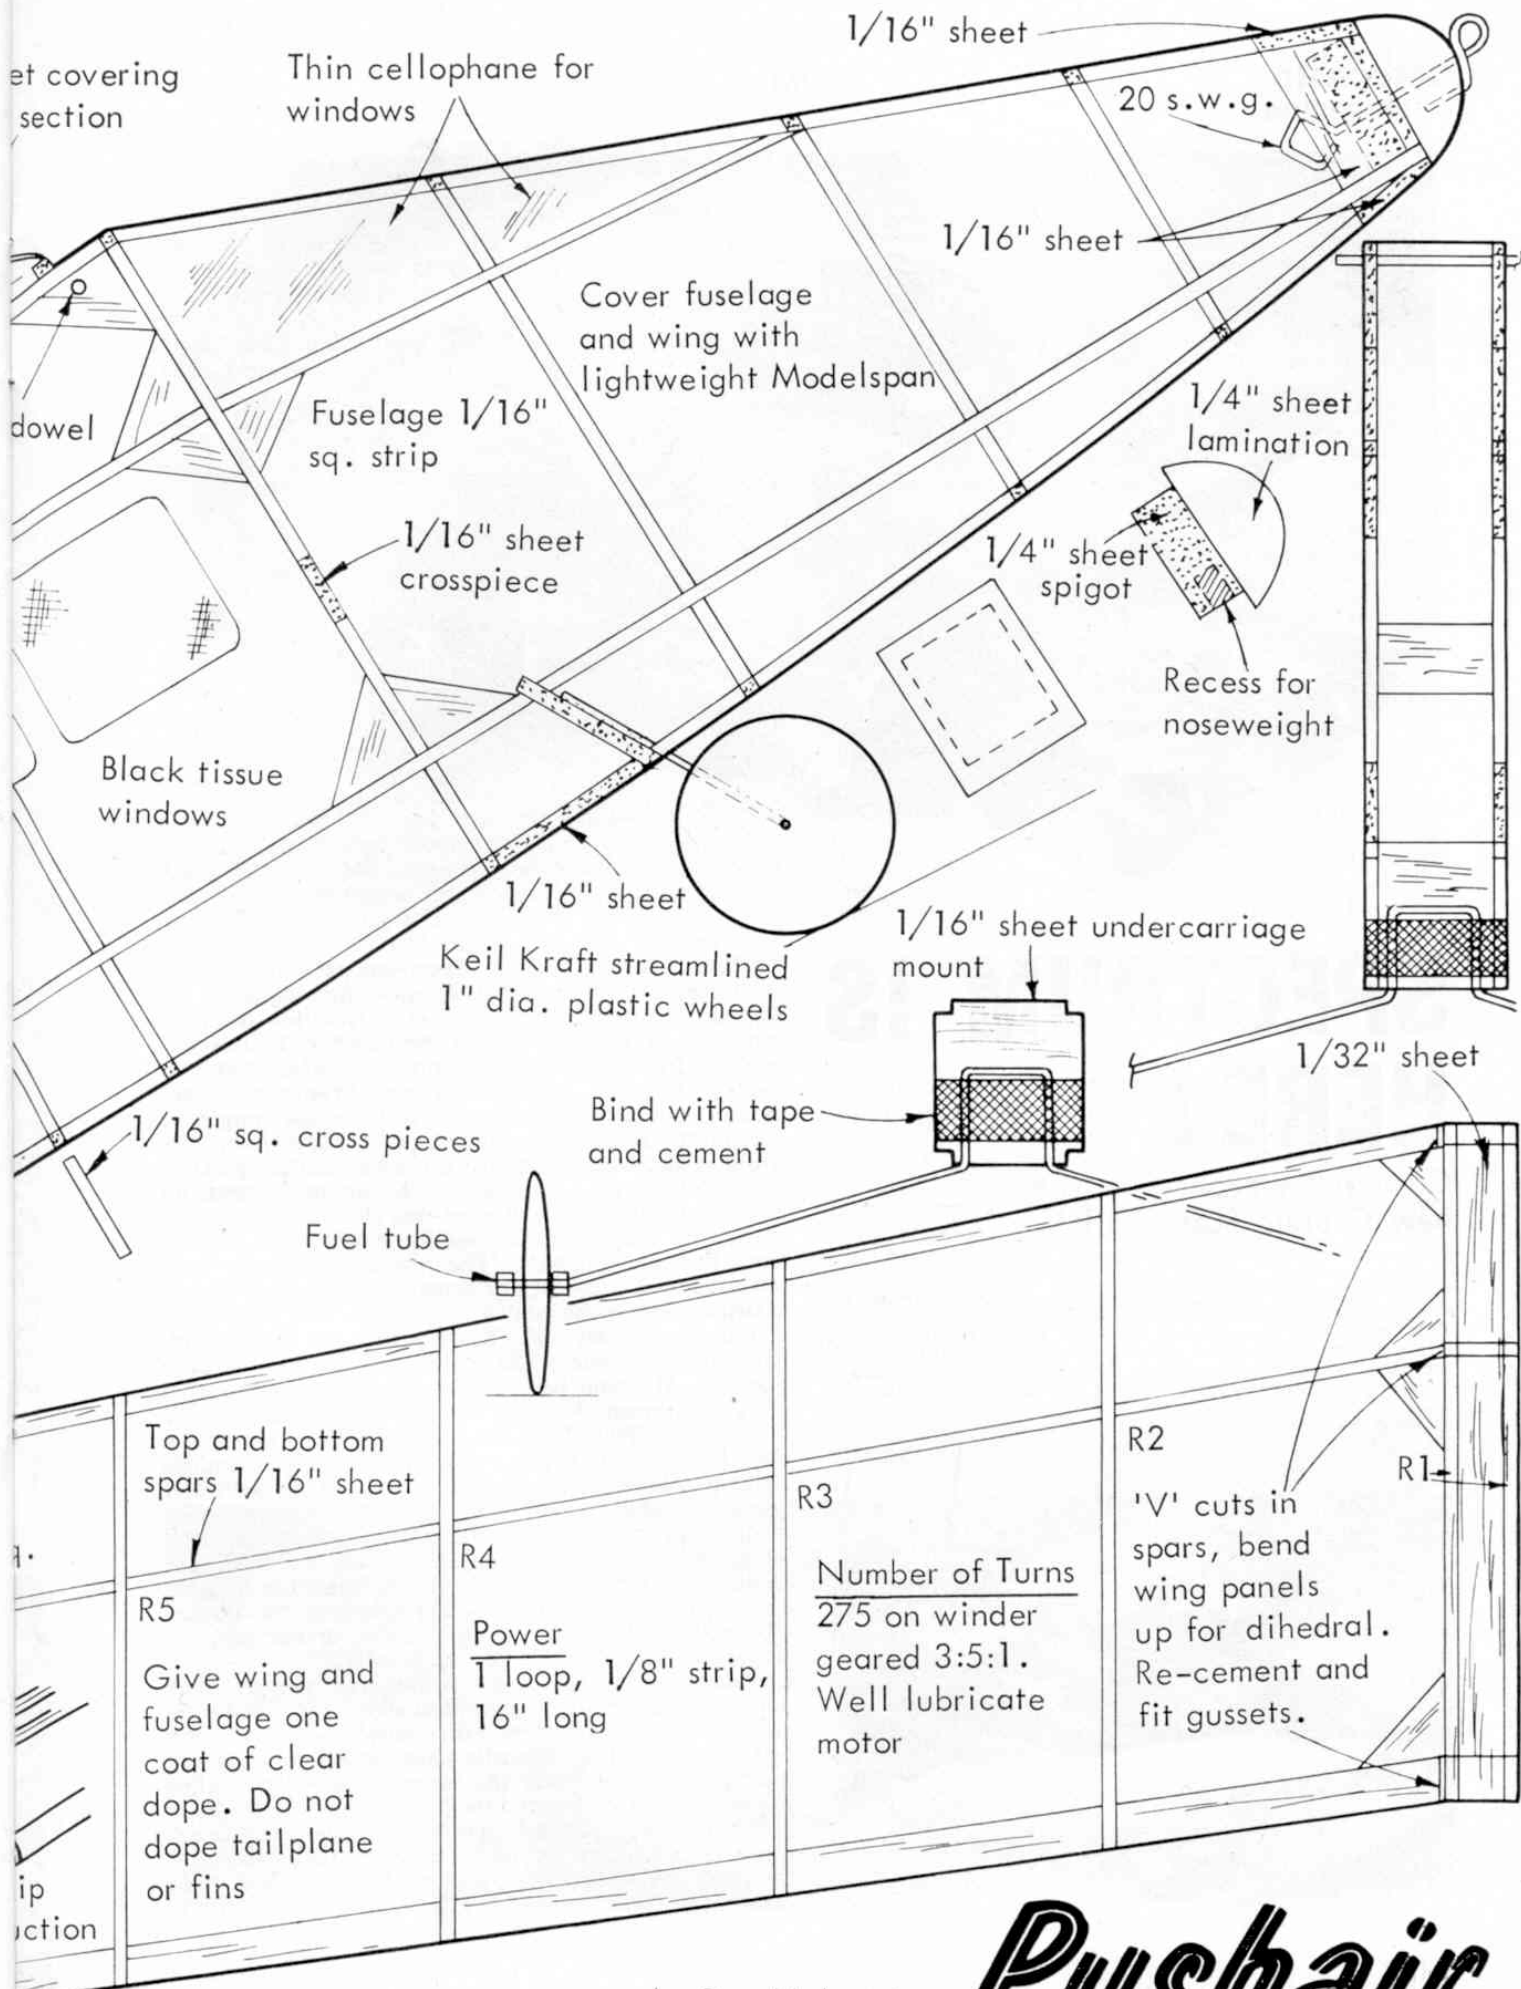

by Ray Malmström

Pushair